

# Owner's Manual • Manual de operación • Guide de L'utilisateur

## • INTERNET350U • INTERNET525U

INTERNET OFFICE®

UPS Systems • Sistemas UPS • Systèmes UPS



### Installation

**STEP 1:** Plug the UPS into an electrical outlet that does not share a circuit with a heavy electrical load (e.g., an air conditioner or refrigerator, etc.)

**STEP 2:** Determine the total VA or wattage draw of all the equipment you plan on connecting to the Battery Backup Protected/Surge Protected Outlets. Look on the equipment nameplate for this information. If the equipment is listed in amps, multiply the number of amps by 120 to determine VA. (Example: 1 amp × 120 = 120 VA). The total VA for all the equipment cannot exceed the UPS's output capacity (see specifications).

**STEP 3:** Plug your computer and monitor into the three Battery Backup Protected/Surge Protected Outlets. (Remember they provide both surge and battery backup protection.) NOTE: Do not plug laser printers into these outlets.

**STEP 4:** Plug your peripherals (e.g., printer, scanner or fax machine) into the three Surge Protected Outlets. (Remember they are not supplied with battery backup during a utility power failure.)

### Important Safety Instructions

#### SAVE THESE INSTRUCTIONS

This manual contains instructions and warnings that should be followed during the installation, operation and storage of all Tripp Lite UPS Systems. Failure to heed these warnings will void your warranty.

#### UPS Location Warnings

- Install your UPS indoors, away from excess moisture or heat, conductive contaminants, dust or direct sunlight.
- For best performance, keep the indoor temperature between 32° F and 104° F (0° C and 40° C).
- Leave adequate space around all sides of the UPS for proper ventilation.

#### UPS Connection Warnings

- Connect your UPS directly to a properly grounded AC power outlet. Do not plug the UPS into itself; this will damage the UPS.
- Do not modify the UPS's plug, and do not use an adapter that would eliminate the UPS's ground connection.
- Do not use extension cords to connect the UPS to an AC outlet. Your warranty will be voided if anything other than Tripp Lite surge suppressors are used to connect your UPS to an outlet.
- If the UPS receives power from a motor-powered AC generator, the generator must provide clean, filtered, computer-grade output.

#### Equipment Connection Warnings

- Do not use Tripp Lite UPS Systems for life support appliances in which a malfunction or failure of a Tripp Lite UPS System could cause failure or significantly alter the performance of a life-support device.
- Do not connect surge suppressors or extension cords to the output of your UPS. This might damage the UPS and will void the surge suppressor and UPS warranties.

#### Battery Warnings

- Your UPS does not require routine maintenance. Do not open your UPS for any reason except battery replacement. There are no user-serviceable parts inside.
- Battery replacement must be performed by qualified service personnel. Because the batteries present a risk of electrical shock and burn from high short-circuit current, observe proper precautions. Unplug and turn off the UPS before performing battery replacement. Use tools with insulated handles, and replace the existing batteries with the same number and type of new batteries (Sealed Lead-Acid). Do not open the batteries. Do not short or bridge the battery terminals with any object.
- The UPS batteries are recyclable. Refer to local codes for disposal requirements, or in the USA only call 1-800-SAV-LEAD, 1-800-8-BATTERY (1-800-8-228-8379) or visit [www.rbrc.com](http://www.rbrc.com) for recycling information. Do not dispose of the batteries in a fire.
- Do not attempt to add external batteries to the UPS.

### Controls

**1 Power On/Off Button:** This button controls your UPS's inverter, and has three functions:

**Toggle UPS Protection OFF/ON:** While the UPS is connected to utility power, press and hold this button until you hear a beep in order to turn UPS protection OFF (or ON again). If UPS protection is OFF, the UPS will only provide power to its outlets while it is receiving utility power: it will not provide power from battery reserves during a blackout. When you turn UPS protection OFF, the Line LED will flash until UPS protection is turned ON again.

**Shut Down:** To turn your UPS completely OFF, first disconnect connected equipment, then unplug the UPS from AC power, then hold this button down until you hear a beep. You may also shut the UPS down by holding this button down until you hear a beep while the UPS is providing battery backup power.

**Cold Start:** If your UPS's batteries are charged, you may cold start the UPS to use it as a stand-alone power supply in the absence of AC power. To do so, press this button until you hear a beep.

**Alarm Will Sound . . .** intermittently while the UPS is performing a self-test after the UPS is plugged in. Alarm will sound continuously if the UPS detects either an undercharged battery or overloaded outlets while performing a self-test. If alarm sounds continuously during the self-test, follow the instructions under the Red Battery/Overload Indicator LED heading.

**2 Battery Backup Protected/Surge Protected Outlets:** These outlets provide both battery backup and surge protection. Plug your computer, monitor and other critical equipment into these outlets. NOTE: DO NOT PLUG PRINTERS INTO THESE OUTLETS.

**3 Surge Protected Outlets:** While all six outlets will provide surge and line noise protection, the three Surge Protected Outlets will not supply battery backup. Plug equipment (such as a printer, scanner or fax machine) that does not require battery backup during a utility power failure into these outlets.


**4 USB Communication Port:** The USB port connects your UPS to any USB workstation or computer. NOTE: this connection is optional; your UPS will operate normally without this connection. Using the USB port, your UPS can communicate line-fail and low-battery status to your computer. Use with Tripp Lite software (available FREE via the Web at [www.tripplite.com](http://www.tripplite.com)) and included cabling to automatically save open files and shut down equipment during a blackout. Contact Tripp Lite Customer Support at 1-773-869-1234 or consult your power protection software manual for more information.

**5 RJ11 tel/DSL Surge Suppressor Jacks:** NOTE: Connecting equipment to the RJ11 jacks is optional. The UPS will still work properly without this connection. RJ11 jacks can provide protection against surges on a single telephone line. Plug a single telephone line into UPS's "IN" jack. Plug a telephone and/or modem/fax device (6 ft. RJ11 cord set included) from your computer into UPS's two "OUT" jacks. Two "OUT" jacks do not work simultaneously.

**6 Green Line/Battery OK LED:** This LED lights continuously when the UPS is ON and receiving normal AC power, indicating that the battery is charging and connected equipment is receiving power. This LED also lights continuously when the UPS is first turned on and a start-up self test is in progress. This LED blinks when the UPS is in inverter operation (operating from battery) indicating that the battery is discharging. If the alarm sounds continuously and Red Battery/Overload LED lights while this light is blinking, the UPS is nearly out of power: you should save files and shut down your equipment immediately.

**7 Red Low Battery/Overload LED:** This LED lights continuously while the start-up self test is in progress. If the light stays on after self-test or at any other time the inverter is overloaded. In this case, turn OFF the UPS, unplug at least one piece of equipment from the Battery Backup Protected/Surge Protected Outlets, then turn the UPS back ON. A self-test will begin if the UPS is no longer in overload mode. If the UPS is still overloaded after restart, keep the UPS ON and allow it to charge for 4 to 6 hours, then turn the UPS OFF and back ON to start self-test. This LED blinks when the UPS detects low battery voltage and cut-off of battery is imminent or battery is recharging.

Continued on reverse side

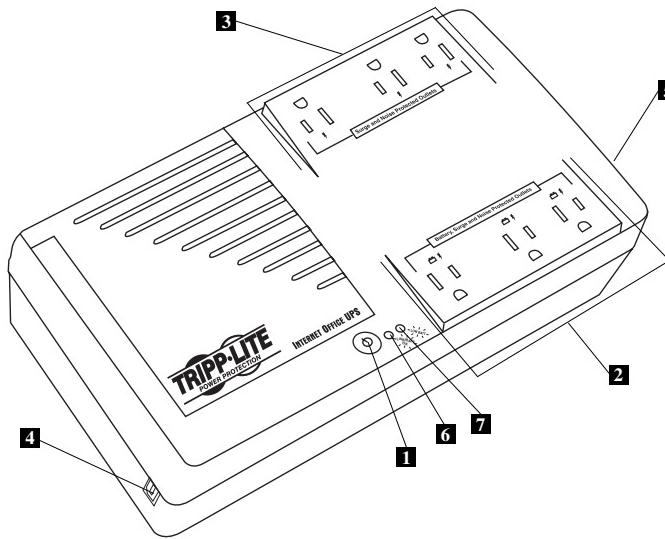

### Instalación

**PASO 1:** Enchufe el UPS a una toma de corriente en la que no esté conectado un circuito que consuma mucha electricidad (por ejemplo, aparatos de aire acondicionado, refrigeradores, etc.).

**PASO 2:** Calcule el consumo total de VA o vatios del equipo que vaya a conectar a las tomas de corriente protegidas por batería y contra sobrevoltaje. Para ello, consulte los datos que aparecen en las placas de identificación del equipo. Si el valor correspondiente está indicado en amperios, multiplíquelo por 120 y así determinará su valor en VA (Ejemplo: 1 amperio × 120 = 120 VA). El valor total de VA del consumo de todo el equipo no podrá exceder la capacidad del UPS (consulte las especificaciones correspondientes).

**PASO 3:** Enchufe la computadora y el monitor a las tres tomas de corriente protegidas mediante respaldo de batería y contra sobrevoltaje (recuerde que le ofrecen protección contra el sobrevoltaje así como respaldo de batería). NOTA: No debe enchufar impresoras láser en estas tomas de corriente.

**PASO 4:** Enchufe los dispositivos periféricos en alguna de las tres tomas de corriente que ofrecen protección contra sobrevoltaje (por ejemplo, impresora, escáner o fax). Recuerde que en caso de ocurrir un fallo en el suministro eléctrico estos dispositivos no cuentan con respaldo de batería.

### Importantes instrucciones de seguridad

#### GUARDE ESTAS INSTRUCCIONES

Este manual contiene advertencias e instrucciones importantes que deben seguirse durante la instalación, operación y almacenamiento de todos los sistemas UPS de Tripp Lite. De no cumplirse estas advertencias, la garantía será anulada.

#### Advertencias sobre la ubicación del UPS

- Instale el sistema UPS bajo techo, alejado del calor o la humedad excesivos, de los contaminantes conductivos, del polvo o de la luz solar directa.
- Para lograr el mejor rendimiento, mantenga la temperatura interior entre 0° C y 40° C (32° F y 104° F).
- Mantenga suficiente espacio alrededor del sistema UPS para permitir una ventilación adecuada.

#### Advertencias sobre la conexión del UPS

- Conecte su sistema UPS directamente a una toma de energía de CA con conexión adecuada a tierra. No conecte el sistema UPS a sí mismo, ya que esto lo dañará.
- No modifique los conectores del UPS y no utilice un adaptador que pueda eliminar la conexión a tierra del sistema.
- No utilice cables de extensión para conectar el UPS a la toma de CA. Si se utiliza otro tipo despresur de sobretensión que no sea Tripp Lite para conectar el UPS a la toma de corriente, se anulará la garantía del sistema.
- Si el sistema UPS recibe energía eléctrica por medio de un generador motorizado de CA, éste deberá proporcionar una salida de corriente limpia y filtrada del tipo utilizado para las computadoras.

#### Advertencias sobre la conexión de equipos

- No utilice los sistemas UPS de Tripp Lite en aplicaciones para el sostén de la vida humana donde un fallo pudiera causar anomalías o alterar significativamente el rendimiento del dispositivo del sostén de vida.
- No conecte supresores de sobretensión o cables de extensión a la salida del sistema UPS. Esto podría dañarlo, así como al supresor de picos, e invalidar sus garantías.

#### Advertencias sobre las baterías

- El sistema UPS no requiere mantenimiento rutinario alguno. No abra el UPS por ningún motivo, excepto para el reemplazo de las baterías. No hay partes internas a las que el usuario pueda dar servicio.
- Sólo personal técnico debidamente capacitado puede realizar el cambio de las baterías. Debido a que las baterías pueden provocar un choque eléctrico o quemaduras como consecuencia de una corriente elevada en corto circuito, deben adoptarse las precauciones apropiadas. Apague y desenchufe el sistema UPS antes de realizar el cambio de las baterías. Utilice herramientas con empuñaduras aisladas y cambie las baterías existentes por baterías nuevas del mismo número y tipo (selladas y de ácido-plomo). No abra las baterías. No permita que ningún objeto entre en contacto o puentee las terminales de las baterías.
- Las baterías son reciclables. Véase las normas locales sobre los requerimientos de los desechos, o bien, en los EE.UU. solamente, llame al 1-800-SAV-LEAD, 1-800-8-BATTERY (1-800-8-228-8379) o visite [www.rbrc.com](http://www.rbrc.com) para obtener información sobre el reciclado. No deseche las baterías arrojándolas al fuego.
- No agregue baterías externas al sistema UPS.

#### Controles

**1 Botón de encendido/apagado:** Este botón controla el inversor del UPS y tiene tres funciones:

**Alternar entre los modos de protección apagado y encendido (OFF/ON) del UPS:** Cuando el UPS esté conectado a la energía eléctrica, oprima este botón y manténgalo oprimido hasta escuchar un tono, ya sea para apagar o encender la protección del UPS. Si la protección del UPS está apagada (OFF), el equipo sólo proporcionará energía en sus tomas cuando esté recibiendo energía eléctrica; no proporcionará energía mediante sus baterías durante un apagón. Cuando usted apaga la protección del UPS, el diodo (LED) del indicador de línea parpadea hasta que vuelva a encenderla.

**Apagado:** Para apagar completamente su UPS, primero desconecte el equipo conectado, después desenchufe el UPS de la energía CA y posteriormente mantenga este botón oprimido hasta que escuche un tono. También puede apagar el UPS mientras está proporcionando el respaldo de batería manteniendo este botón oprimido hasta que escuche un tono.

**Arranque en frío:** Si las baterías del UPS están recargadas, puede arrancarlo en frío para utilizarlo como un suministro de energía autónoma cuando no haya energía de CA. Para hacer esto, mantenga este botón oprimido hasta que escuche un tono.

La alarma sonará . . . intermitentemente, mientras el UPS realiza una autopropia después de se haya encendido. La alarma sonará continuamente si el UPS detecta durante la autopropia ya sea una batería con carga baja o que las tomas están sobrecargadas. Si durante la autopropia sonora continuamente la alarma, siga las instrucciones del apartado "LED rojo indicador de batería y sobrecarga".

**2 Tomas de corrientes que están protegidas respaldo de batería y contra el sobrevoltaje:** Estas tomas de corriente ofrecen protección contra el sobrevoltaje y también ofrecen un respaldo de batería. Enchufe a estas tomas de corriente su computadora, monitor y equipo importante. NOTA: NO ENCHUFE IMPRESORAS A ESTAS TOMAS DE CORRIENTE.

**3 Tomas de corriente protegidas contra el sobrevoltaje:** Las seis tomas de corriente protegen contra el sobrevoltaje y los ruidos de la línea, pero tres de ellas no proporcionan respaldo de batería. Enchufe a estas tomas de corriente su computadora, monitor y equipo importante.

NOTA: NO ENCHUFE IMPRESORAS A ESTAS TOMAS DE CORRIENTE.

**4 Puerto de comunicación USB:** El puerto USB conecta el sistema UPS a cualquier estación de trabajo o computadora USB. NOTA: esta conexión es optativa; aún sin ella el UPS podrá funcionar normalmente. A través del puerto USB, el UPS podrá indicarle a su computadora la existencia de un fallo en la línea, o bien que las baterías están desgastadas. Utilícelo con el software de Tripp Lite (que podrá obtener GRATIS en Internet en [www.tripplite.com](http://www.tripplite.com)) y el cableado incluido para guardar automáticamente los archivos que estén abiertos y cerrar su sistema en caso de interrupción del suministro de la energía eléctrica. Si desea más información, póngase en contacto con el departamento de servicio al cliente de Tripp Lite en 1-773-869-1234, o consulte el manual del software para la protección de energía.

**5 Enchufes RJ11 para supresión de sobretensión en el módem y fax:** Los enchufes RJ11 protegen la línea telefónica contra sobrecargas. Conecte la línea telefónica al enchufe "IN" (entrada) del UPS. Conecte un aparato telefónico o un dispositivo de módem o fax (se incluye un juego de cables RJ11 de 6 pies) desde su computadora a las dos conexiones de salida del UPS ("OUT"). Las dos conexiones de salida no trabajan simultáneamente.

**6 LED indicador verde de línea:** Este diodo permanece encendido cuando el UPS está ENCENDIDO y recibe una alimentación de CA normal, indicando así que la batería se está cargando y que el equipo conectado está recibiendo corriente eléctrica. Asimismo, permanece encendido la primera vez que se enciende el UPS y cuando se lleva a cabo la autopropia al ponerse en funcionamiento. Este LED parpadea cuando el UPS funciona como inversor (cuando funciona con la batería, indicando así que la batería se está descargando). Si la alarma sonara continuamente y se enciende el diodo rojo de batería y sobrecarga al mismo tiempo que parpadea la luz verde, es indicación de que la energía del UPS casi se ha agotado, por lo que usted guardar sus archivos y apagar su equipo de inmediato.

**7 LED rojo indicador de batería y sobrecarga:** Este diodo se mantiene encendido cuando se lleva a cabo la autopropia en la puesta en funcionamiento inicial. Si una vez concluida la autopropia la luz sigue encendida y la alarma sonara continuamente, es indicación de que el inversor está sobrecargado. En este caso, desconecte por lo menos un equipo de las tomas de corriente que están protegidas mediante respaldo de batería y contra el sobrevoltaje. Este diodo parpadea cuando el UPS detecta que el voltaje de la batería es deficiente.



1111 W. 35th Street • Chicago, IL 60609 USA  
(773) 869-1234 • [www.tripplite.com](http://www.tripplite.com)

### Installation

**ÉTAPE 1 :** Branchez le système UPS dans une prise de secteur qui ne partage pas de circuit avec un appareil qui consomme beaucoup d'électricité (par exemple, un conditionneur d'air, un réfrigérateur, etc.)

**ÉTAPE 2 :** Déterminez le débit total en voltampères ou en watts de tout le matériel que vous prévoyez de brancher sur les prises de batterie protégées contre la surtension. Examinez la plaque signalétique de votre matériel pour obtenir cette information. Si la consommation du matériel est inscrite en ampères, multipliez ce nombre par 120 pour calculer les voltampères. (exemple : 1 ampère × 120 = 120 voltampères). Le total des voltampères de tout le matériel ne doit pas dépasser la puissance nette du système UPS (voir section Caractéristiques).

**ÉTAPE 3 :** Branchez votre ordinateur et le moniteur dans les trois prises de batterie protégées contre la surtension. (Rappelez-vous qu'elles fournissent à la fois une protection contre la surtension et une alimentation par batterie.) NOTE : NE branchez PAS d'imprimante laser dans ces prises.

**ÉTAPE 4 :** Branchez vos périphériques (par exemple, une imprimante, un scanner ou un télécopieur) dans les trois prises protégées contre la surtension. (Rappelez-vous qu'elles ne sont pas alimentées par la batterie de secours pendant les pannes de secteur.)

### Importantes consignes de sécurité

#### GARDEZ CES INSTRUCTIONS EN UN LIEU SÛR

Le présent guide contient des instructions et des mises en garde qui doivent être suivies pendant l'installation, l'exploitation et l'entreposage de tous les systèmes UPS Tripp Lite. Ne pas tenir compte de ces mises en garde annule la garantie.

#### Mises en garde relatives à l'emplacement du système UPS

- Installez votre système UPS à l'intérieur, loin de l'humidité, de la chaleur excessive, des impuretés conductrices, de la poussière et de la lumière directe du soleil.
- Pour un meilleur fonctionnement, maintenez la température ambiante entre 0° C et 40° C (32° F

**Audible Alarm Indicator:** This alarm beeps intermittently when the UPS is in inverter operation to alert you that it is supplying power from the battery. This alarm also beeps intermittently when the UPS is performing a self-test as it turns ON. This alarm sounds continuously when the UPS detects low battery voltage and is nearly out of power; you should save files and shut down your equipment immediately.

**NOTE:** All indicator lights are OFF when the UPS is not plugged into a live AC outlet and is not turned ON.

## Storage & Service

### Storage

All connected equipment should be turned off, then disconnected from the UPS to avoid battery drain. Unplug your UPS from its AC receptacle, then press and hold its ON/OFF button to deactivate it. Your UPS is now ready for storage. If you plan on storing your UPS for an extended period of time, fully recharge the UPS batteries once every three months by plugging the UPS into a live AC outlet and letting the UPS charge for 2 to 4 hours. If you leave your UPS batteries discharged for an extended period of time, they will suffer a permanent loss of capacity.

### Service

If returning your UPS for service, contact your local Tripp Lite dealer or distributor. They will refer you to a service center. Please carefully pack the UPS using the ORIGINAL PACKING MATERIAL that came with the unit. Enclose a letter describing the symptoms of the problem. If the UPS is within the warranty period, enclose a copy of your sales receipt.

## Specifications

MODEL	INTERNET350U	INTERNET525U
<b>Output Capacity (VA/Watts):</b>	350/180	525/300
<b>Nominal Output (Voltage, Frequency):</b>	120V, 60Hz	120V, 60Hz
<b>Nominal Input (Voltage, Frequency):</b>	120V, 60Hz	120V, 60Hz
<b>Battery Runtime (Half Load/Full Load):</b>	12/4 min.	10/3 min.
<b>Battery Recharge Rate (to 90% charge):</b>	2 - 4 hrs.	2 - 4 hrs.
<b>Transfer Time, Typical:</b>	2 - 4 ms.	2 - 4 ms.
<b>Approvals:</b>	UL, cUL, NOM	UL, cUL, NOM

**ALL UNITS:** Output Waveform Line Mode (filtered sinewave); Output Waveform Battery Mode (PWM sine wave); AC Surge Suppression (exceeds IEEE 587 Cat. A & B standards); AC Noise Attenuation (>40 dB at 1MHz); AC Protection Modes (H to N, H to G, N to G).

## Warranty and Insurance

### 2-YEAR LIMITED WARRANTY

Seller warrants this product, if used in accordance with all applicable instructions, to be free from original defects in material and workmanship for a period of 2 years (except batteries outside USA and Canada, 1 year) from the date of initial purchase. If the product should prove defective in material or workmanship within that period, Seller will repair or replace the product, in its sole discretion. Service under this Warranty can only be obtained by your delivering or shipping the product (with all shipping or delivery charges prepaid) to: Tripp Lite; 1111 W. 35th Street; Chicago IL 60609; USA. Seller will pay return shipping charges. Call Tripp Lite Customer Service at (773) 869-1234 before sending any equipment back for repair.

**THIS WARRANTY DOES NOT APPLY TO NORMAL WEAR OR TO DAMAGE RESULTING FROM ACCIDENT, MISUSE, ABUSE OR NEGLECT. SELLER MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY EXPRESSLY SET FORTH HEREIN. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE; AND THIS WARRANTY EXPRESSLY EXCLUDES ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES. (Some states do not allow limitations on how long an implied warranty lasts, and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from jurisdiction to jurisdiction.)**

Tripp Lite; 1111 W. 35th Street; Chicago IL 60609; USA

**WARNING:** The individual user should take care to determine prior to use whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, the manufacturer makes no representation or warranty as to the suitability or fitness of these devices for any specific application.

Policy of Tripp Lite is one of continuous improvement. Specifications are subject to change without notice.

### ULTIMATE® LIFETIME INSURANCE POLICY (Valid in U.S. and Canada ONLY)

Tripp Lite warrants, for the lifetime of the product, (at Tripp Lite's option) to repair or replace (on a pro rata basis) directly connected equipment that is damaged due to power transients while properly connected to Tripp Lite products offering the Ultimate Insurance Policy. Reimbursement or restoration for data loss is not included. Power transients include spikes and surges on the AC power, data, or telephone lines that the Tripp Lite products have been designed to protect against (as recognized by industry standards).

**AC Power Line Transients:** To claim damages the Tripp Lite product must be plugged into a properly wired and grounded outlet. No extension cords, or other electrical connections may be used. The installation must comply with all applicable electrical and safety codes set forth by the National Electrical Code (NEC). Except as provided above, this warranty does not cover any damage to properly connected electronic equipment resulting from a cause other than an "AC power transient". If user meets all of the above requirements, Tripp Lite will repair or replace (at Tripp Lite's option) equipment up to the specified value (See Ultimate Insurance Policy Limits). No coverage is allowed for damage resulting from telephone or data lines, unless they are separately protected as described below.

**Telephone and Data Line Transients:** Tripp Lite will repair or replace directly connected equipment that is damaged by transients on telephone and/or data lines only when all such paths are protected by a Tripp Lite protection product(s) and the AC power (utility) line is simultaneously protected by a Tripp Lite power protection device (UPS, surge suppressor or line conditioner) with Ultimate Insurance coverage. This product protects one line; therefore one directly connected piece of equipment.

Reimbursement dollar limits will be equal to that of the Tripp Lite power protection protector. Coverage is excluded where a suitable environment for the protection device is not provided, including, but not limited to, lack of a proper safety ground. Telephone service equipment must also include a properly installed and operating "primary protection" device at the telephone service entrance (such devices are normally added during telephone line installation).

All above warranties are null and void if the Tripp Lite product has been improperly installed, tampered with or altered in any way, if the connected equipment was not used under normal operating conditions or in accordance with any labels or instructions. All claims under this warranty must be submitted in writing to Tripp Lite within 30 days of the occurrence or the claim will not be considered. This warranty does not include damage resulting from accident or misuse, and applies to domestic (USA & Canada) use of these products only.

Tripp Lite reserves the right to determine whether the damage to the connected equipment is due to malfunction of the Tripp Lite product by requesting the equipment in question be sent to Tripp Lite for examination. This policy is above and beyond, only to the extent needed, of that provided by any coverage of connected equipment provided by other sources, including, but not limited to, any manufacturer's warranty and/or any extended warranties.

**EXCEPT AS PROVIDED ABOVE, TRIPP LITE MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.** Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to purchaser.

**EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL TRIPP LITE BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.** Specifically, Tripp Lite is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise.

To receive service under this warranty, you must be the original purchaser/user of the product in question. You must obtain a Returned Material Authorization (RMA) number from Tripp Lite. Products must be returned to Tripp Lite with transportation charges prepaid and must be accompanied by a description of the problem encountered and proof of date and place of purchase.

### Consumer Information and FCC Requirements (U.S. only)

1. This equipment complies with Part 68 of the FCC rules. On the top or bottom of this equipment is a label that contains, among other information, the FCC registration number for this equipment. If requested, provide this information to your telephone company.
2. If your Fax/Modem Protector causes harm to the telephone network, the telephone company may temporarily discontinue your service. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.
3. Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.
4. If you experience trouble with this Fax/Modem Protector, please contact Tripp Lite Customer Support, 1111 W. 35th Street, Chicago, Illinois 60609; Phone (773) 869-1234 for repair/warranty information. The telephone company may ask you to disconnect this equipment from the network until the problem has been corrected or you are sure that the equipment is not malfunctioning.
5. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. (Contact your state public utility commission or corporation for information.)

### FCC Radio/TV Interference Notice (U.S. only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference using one or more of the following measures: reorient or relocate the receiving antenna; increase the separation between the equipment and the receiver; connect the equipment into an outlet on a circuit different from that which the receiver is connected; consult the dealer or an experienced radio/television technician for help. The user must use shielded cables and connectors with this product. Any changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following 2 conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

### Equipment Attachment Limitations (models with the Industry Canada label in Canada only)

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets the telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements Document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that the compliance with the above conditions might not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas. Caution: Users should not attempt to make connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

**Indicador de alarma audible:** Esta alarma produce un sonido intermitente cuando el UPS está funcionando como inversor a fin de advertir que la batería es la que proporciona la alimentación. La alarma también suena intermitentemente cuando el ENCENDER el UPS éste realiza la autoprueba. Esta alarma suena continuamente cuando el UPS detecta que el voltaje de la batería es deficiente y que ésta casi se ha agotado, por lo que deberá guardar los archivos y apagar el equipo de inmediato.

**NOTA:** Todas las luces indicadoras están APAGADAS cuando el UPS no está enchufado a una toma de corriente de CA ni está ENCENDIDO.

## Almacenamiento y servicio

### Almacenamiento

Todos los equipos conectados se deberán desactivar y a continuación desconectar del UPS para evitar el desgaste de la batería. Desenchufe el UPS del receptáculo de CA y oprima el botón ON/OFF (encendido y apagado) hasta que se desactive. Ahora ya se puede guardar el UPS. Si planea guardar el sistema UPS por un período prolongado de tiempo, se deberán recargar completamente las baterías del sistema UPS cada tres meses, conectando el sistema UPS a una toma de corriente alterna, CA, y permitiendo que se recarguen durante 2 a 4 horas. Si deja descargadas las baterías durante un período de tiempo prolongado, sufrirán una pérdida permanente de capacidad.

### Servicio

Si piensa devolver este sistema UPS para efectuar reparaciones, póngase en contacto con su distribuidor o representante local de Tripp Lite. Éste le indicará el centro de servicio más cercano. Por favor, embale el sistema UPS usando el MATERIAL DE EMPAQUE ORIGINAL que se proporcionó con la unidad. Adjunte una carta que describa los síntomas del problema. Si el sistema UPS se encuentra dentro del período de garantía, adjunte una copia de su nota de compra.

## Especificaciones

MODELO	INTERNET350U	INTERNET525U
<b>Capacidad de salida (VA/Watts):</b>	350/180	525/300
<b>Salida nominal (voltaje, frecuencia):</b>	120V, 60Hz	120V, 60Hz
<b>Entrada nominal (voltaje, frecuencia):</b>	120V, 60Hz	120V, 60Hz
<b>Tiempo de operación de la Batería (Media Carga / Plena Carga):</b>	12/4 min.	10/3 min.
<b>Battery Recharge Rate (to 90% charge):</b>	De 2 a 4 h.	De 2 a 4 h.
<b>Tiempo de transferencia típico:</b>	De 2 a 4 ms.	De 2 a 4 ms.
<b>Certificaciones:</b>	UL, cUL, NOM	UL, cUL, NOM

**TODAS LAS UNIDADES:** Modo de la forma de onda de salida de la linea (onda sinusoidal filtrada); modo de la forma de onda de salida de la batería (onda sinusoidal PWM), supresión de sobrecarga de CA (excede las normas IEEE, Cat 587 estándares A y B); Atenuación de ruidos de CA (>40 dB a 1MHz); Modos de Protección de CA (Positivo a neutro, Positivo a tierra y Neutro a tierra).

## Garantía

### 2-GARANTÍA LIMITADA DE DOS AÑOS

El distribuidor garantiza que este producto, si se utiliza de acuerdo con las instrucciones aplicables, se encuentra libre de defectos en cuanto a los materiales originales y a mano de obra por un período de dos años (excepto en el caso de las baterías fuera de los EE.UU. y Canadá, por el período de 1 año), a partir de la fecha de compra. Si dentro de este período se demuestra que el producto tiene defectos en sus materiales o mano de obra, el distribuidor reparará o cambiará el producto, a su entera discreción. El servicio proporcionado mediante esta garantía sólo podrá obtenerse si se devuelve o envía el producto (con todos los gastos de flete y transporte previamente pagados) a: Tripp Lite; 1111 W. 35th Street; Chicago, IL 60609 EE.UU. El distribuidor pagará los gastos de devolución. Llame al servicio al cliente de Tripp Lite al teléfono (773) 869-1234 antes de devolver cualquier equipo para su reparación. ESTA GARANTÍA NO SE APLICA AL DESGASTE NORMAL NI A LOS DAÑOS QUE SEAN RESULTADO DE ACCIDENTES, MAL USO, ABUSO O NEGLIGENCIA. LOS DISTRIBUIDORES NO OFRECEN NINGUNA OTRA GARANTÍA APARTE DE LA EXPRESAMENTE ESTABLECIDA EN EL PRESENTE DOCUMENTO, CON EXCEPCIÓN DE LO EXPRESAMENTE PROHIBIDO POR LA LEY APLICABLE, TODAS LAS GARANTÍAS IMPLÍCITAS, INCLUYENDO LAS GARANTÍAS COMERCIALES O DE ADECUACIÓN, ESTÁN LIMITADAS EN SU VIGENCIA AL PERÍODO DE GARANTÍA ESTABLECIDO ANTERIORMENTE; ADÉMÁS, ESTA GARANTÍA EXCLUYE EXPRESAMENTE TODO DAÑO INCIDENTAL Y CONSECUENCIAL. (Algunos estados no permiten la limitación de la vigencia de la garantía implícita; además, algunos estados no permiten la exclusión o limitación de los daños incidentales o consecuenciales, por lo que las limitaciones o exclusiones señaladas anteriormente no se aplican en tales estados. Esta garantía otorga derechos legales específicos, aunque se puede disponer además de otros derechos que variarán de una jurisdicción a otra).

Tripp Lite; 1111 W. 35th Street; Chicago IL 60609; EE.UU.

**ADVERTENCIA:** El usuario deberá tener el cuidado de determinar si el dispositivo es apropiado, adecuado o seguro para el uso al que lo tiene destinado, antes de utilizarlo. Dado que las diferentes aplicaciones están sujetas a una enorme variación, el fabricante no puede garantizar que el equipo se adapte o sea apropiado a toda aplicación.

La política de Tripp Lite es de mejora continua. Estas especificaciones están sujetas a cambio sin previo aviso.

### PÓLIZA DE SEGURO DE VIDA ULTIMATE® (válida SÓLO en EE.UU. y Canadá)

TRIPP LITE garantiza, durante toda la vida útil del producto, (a criterio de TRIPP LITE) la sustitución o reparación (mediante prorroga) del equipo conectado directamente y que se haya dañado debido a corriente momentánea de sobretensión mientras se encontraba conectado debidamente a los productos TRIPP LITE que ofrecen la póliza de seguro ULTIMATE®. No se incluye el reembolso o restablecimiento de la información perdida. La corriente momentánea de sobretensión incluye las sobretensiones y variaciones repentinas en las líneas de corriente de CA, los cables de datos y las líneas telefónicas para las cuales se han diseñado los equipos de protección de TRIPP LITE (tal como lo reconoce las normas de este área industrial).

Transitorios en las líneas de CA: Para poder reclamar daños, el producto TRIPP LITE debe estar enchufado a un contacto debidamente cableado y de conexión a tierra. No se podrán utilizar extensiones ni otras conexiones eléctricas. La instalación debe cumplir con todos los reglamentos eléctricos y de seguridad aplicables establecidos por el código eléctrico nacional (NEC, "National Electric Code") de EE.UU. Con excepción de lo establecido anteriormente, esta garantía no contempla ningún daño ocasionado al equipo electrónico debidamente conectado y que haya sido resultado de una causa distinta a un "transistor en la línea de CA". Si el usuario cumple con los requisitos anteriores, TRIPP LITE cambiará o reparará (a criterio de Tripp Lite) todo el equipo hasta el valor previamente especificado (véase los límites de la póliza de seguro Ultimate). No se permite la cobertura de daños provenientes de las líneas telefónicas o de datos, a menos que se hayan protegido por separado, tal como se describe a continuación.

Transitorios en las líneas telefónicas y de datos: Tripp Lite reparará o reemplazará el equipo conectado directamente que sea dañado por corriente momentánea de sobretensión en las líneas telefónicas y de datos solo cuando dichas líneas estén protegidas por productos de Tripp Lite y la línea de CA (electricidad) esté simultáneamente protegida por un dispositivo de protección de energía de Tripp Lite (UPS, supresor de sobretensiones o acondicionador de línea) con cobertura del seguro de vida Ultimate. Este producto protege a una línea, por lo tanto también a una pieza de equipo que está conectada directamente.

El límite para el reembolso en dólares será igual al valor del equipo de protección de Tripp Lite. La cobertura no será válida si no se proporciona un entorno adecuado para el dispositivo de protección, incluida, aunque sin limitarse a, la carencia de una adecuada conexión de a tierra. El equipo de servicio telefónico también debe incluir un dispositivo de "protección principal" debidamente instalado y en operación en la entrada del servicio telefónico (este tipo de dispositivos se agregan normalmente durante la instalación de la línea telefónica).

Todas las garantías anteriores se anularán si la unidad TRIPP LITE no se ha instalado correctamente, se ha modificado o alterado de cualquier modo, o si